


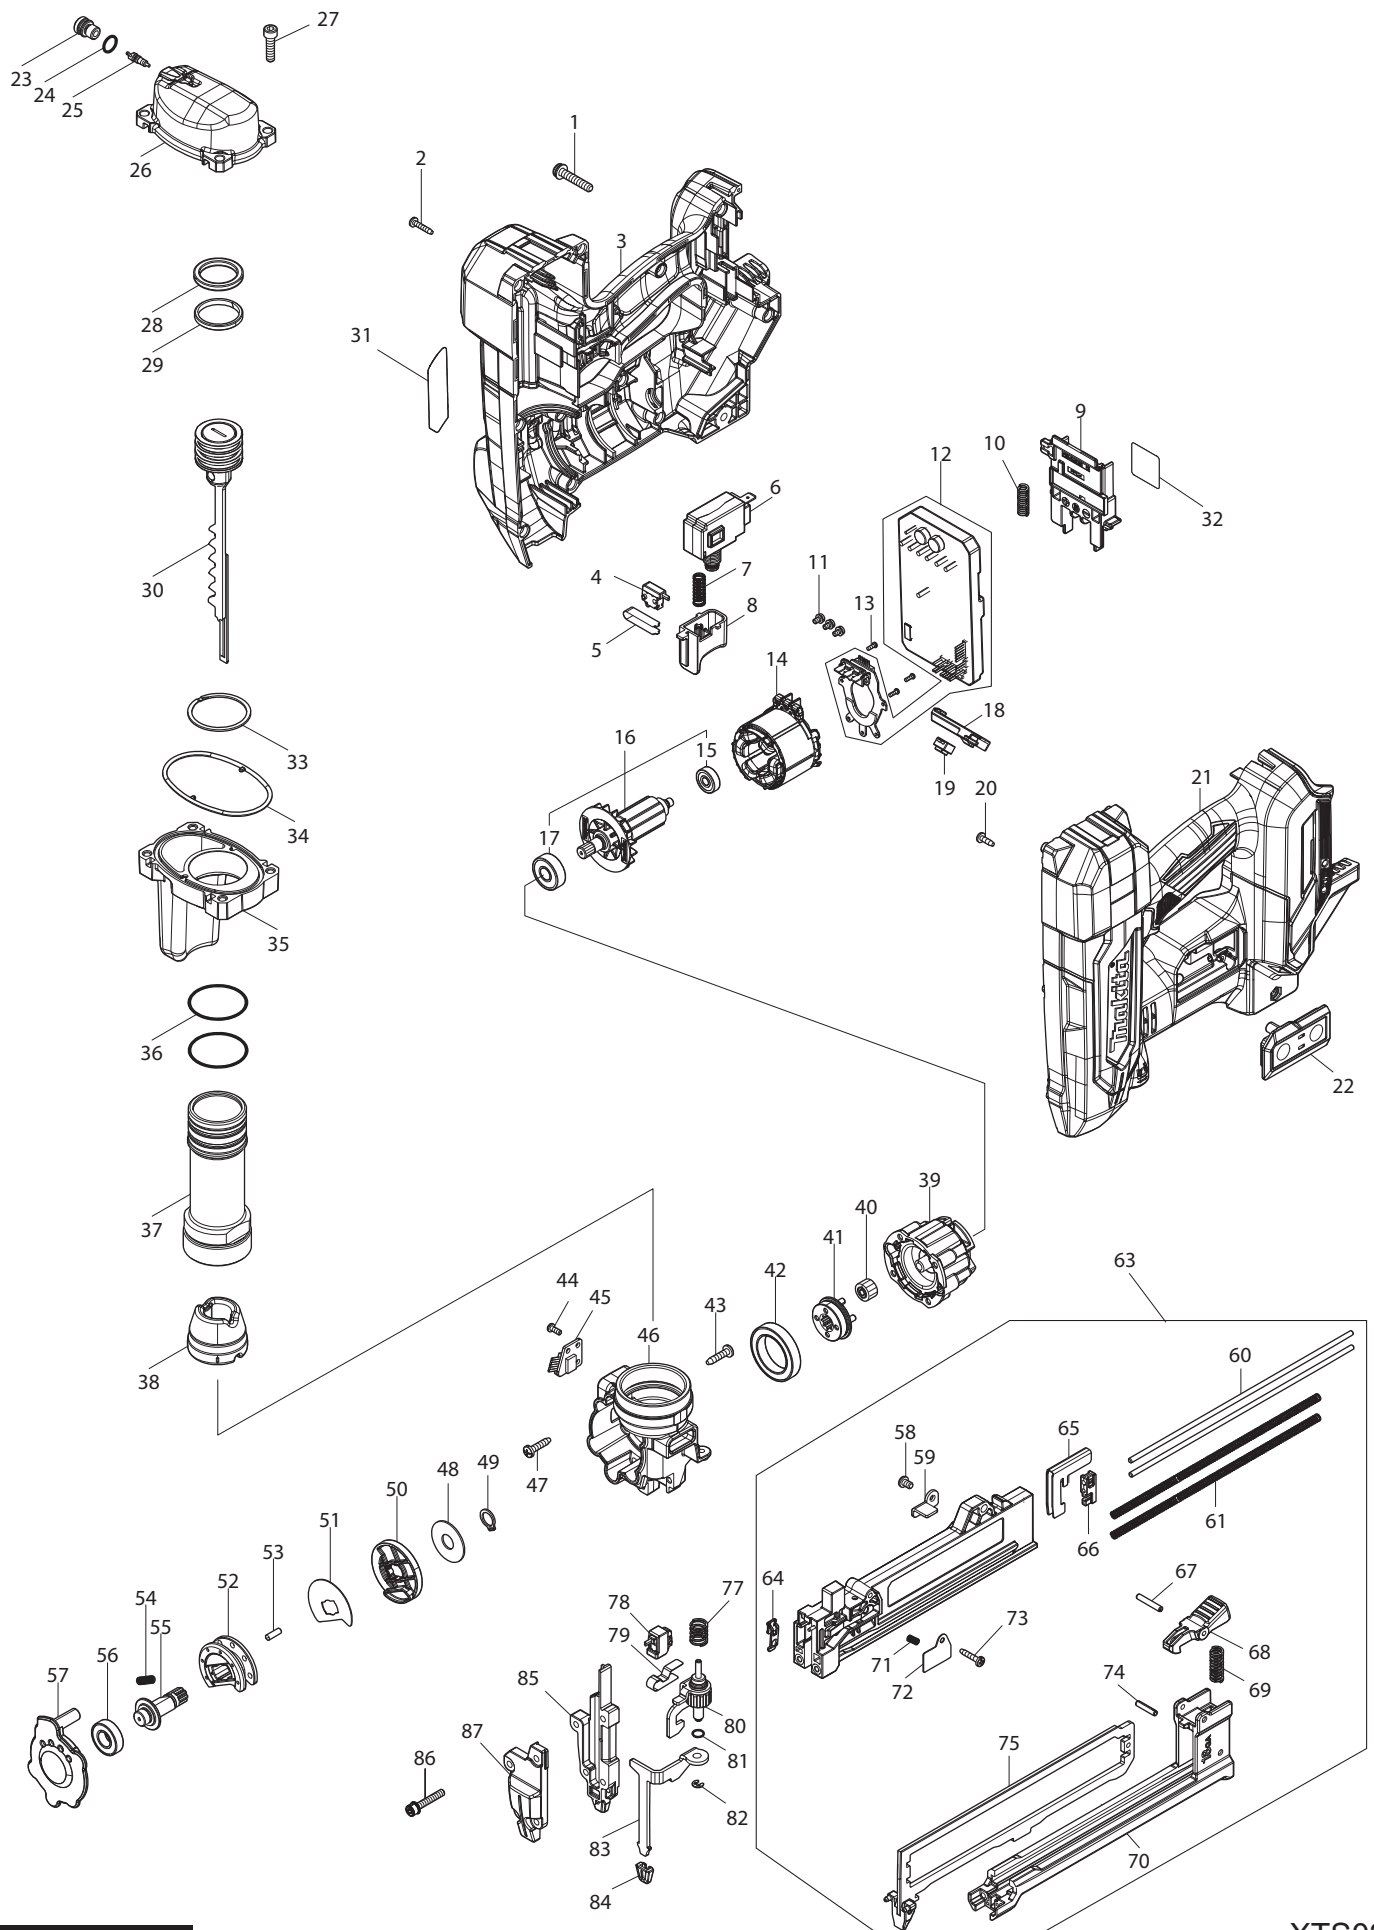

Model XTS02Z Parts List

Item#	Part#	Description	Q'ty
001	911243-8	PAN HEAD SCREW M5X25	1
002	266130-9	TAPPING SCREW BIND PT 3X16	11
003	1831E0-7	HOUSING SET	1
	C10 263005-3	RUBBER PIN 6	2
	C20 252126-6	HEX. LOCK NUT M4-7	2
	C30 252103-8	HEX. LOCK NUT M5-8	1
	D10	INC. 21	
004	632V61-0	SWITCH UNIT	1
005	232889-0	LEAF SPRING	1
006	650060-8	SWITCH C3JR-5BM-PAND-2	1
007	232884-0	COMPRESSION SPRING 7	1
008	4130V7-5	TRIGGER	1
009	654908-6	TERMINAL	1
010	232876-9	COMPRESSION SPRING 7	2
011	652069-6	FLAT HEAD SCREW M3X6	3
012	620P18-7	CONTROLLER	1
013	266490-9	TAPPING SCREW PT 2X6	3
014	629A28-1	STATOR	1
015	210065-6	BALL BEARING 625ZZ	1
016	519865-4	ROTOR ASS'Y	1
	D10	INC. 15,17	
017	210005-4	BALL BEARING 608DDW	1
018	4130V8-3	LED HOLDER	1
019	620P87-8	LED CIRCUIT	1
020	266007-8	TAPPING SCREW BIND PT 3X10	2
021	1831E0-7	HOUSING SET	1
	C10 263005-3	RUBBER PIN 6	2
	C20 252126-6	HEX. LOCK NUT M4-7	2
	C30 252103-8	HEX. LOCK NUT M5-8	1
	D10	INC. 3	
022	620P99-1	SWITCH CIRCUIT COMPLETE	1
023	327D23-0	VALVE CAP	1
024	213007-9	O RING 8	1
025	243138-0	VALVE CORE	1
026	312H24-5	TOP CAP	1
027	922232-8	HEX. SOCKET HEAD BOLT M5X20	4
028	213A78-2	X-RING 23	1
029	4130T8-9	SLIDE RING	2
030	137286-4	DRIVER ASS'Y	1
031	8149C5-7	XTS02 NAME PLATE	1
032	8149C7-3	XTS02 SERIAL NO. LABEL	1
033	259092-8	SPIRAL RETAINING RING (EXT)36	1
034	422B82-8	SEAL RING	1
035	141Y40-0	CHAMBER COMPLETE	1
036	213479-8	O RING 33	2
037	327E19-7	CYLINDER	1
038	422B80-2	FRONT CUSHION	1
039	122G77-8	GEAR ASSEMBLY	1
040	227B71-6	SPUR GEAR 14	4
041	141Y39-5	CARRIER COMPLETE	1
042	210168-6	BALL BEARING 6805DDW	1

043	265E16-4	TAPPING SCREW 4X18	2
044	911002-0	PAN HEAD SCREW M3X6	1
045	620P94-1	SENSOR CIRCUIT	1
046	1411R3-8	INNER HOUSING COMPLETE	1
047	265E16-4	TAPPING SCREW 4X18	4
048	347C87-2	FLAT WASHER 10	1
049	961006-2	RETAINING RING S-10	1
050	162D48-5	HOLDER COMPLETE	1
051	347C92-9	LIFTER PLATE	1
052	327E17-1	LIFTER	1
053	268054-5	PIN 4	6
054	234227-2	COMPRESSION SPRING 3	1
055	327E18-9	LIFTER SHAFT	1
056	210069-8	BALL BEARING 6900LLU	1
057	4130X3-7	LIFTER CAP	1
058	911102-6	PAN HEAD SCREW M4X6	1
059	347C90-3	MAGAZINE STOPPER	1
060	327E20-2	GUIDE SHAFT	2
061	232892-1	COMPRESSION SPRING 4	2
063	137288-0	MAGAZINE ASS'Y	1
	C10 8081T4-0	CAUTION LABEL	1
	C20 8085R2-4	CAUTION LABEL	1
	D10	INC. 58-61,64-75	
064	4130W6-4	LEAF SPRING	1
065	347C89-8	PUSHER	1
066	4130X1-1	PUSHER GUIDE	1
067	951069-6	SPRING PIN 3-20	1
068	4130X2-9	LOCK LEVER	1
069	232891-3	COMPRESSION SPRING 6	1
070	4130W9-8	MAGAZINE END	1
071	232893-9	COMPRESSION SPRING 3	1
072	347C91-1	PLATE	1
073	266130-9	TAPPING SCREW BIND PT 3X16	1
074	951063-8	SPRING PIN 3-16	1
075	162D47-7	SUB MAGAZINE	1
077	232882-4	COMPRESSION SPRING 9	1
078	140W22-7	SWITCH COMPLETE	1
079	232883-2	LEAF SPRING	1
080	141Y69-6	ADJUSTER COMPLETE	1
081	213021-5	O RING 5	1
082	961017-7	STOP RING E-3	1
083	347C93-7	CONTACT ARM	1
084	422B94-1	NOSE ADAPTER	1
085	313614-9	DRIVER GUIDE	1
086	922148-7	HEX. SOCKET HEAD BOLT M4X25	4
087	313577-9	DRIVER GUIDE COVER	1
A01	251314-2	TRUSS HEAD SCREW M4X12	1
A02	346449-3	HOOK	1
A03	422B94-1	NOSE ADAPTER	2